




SPECIFICATION

FREE SPEED		54,000 PRM
COLLET SIZE		3MM or 1/8"
NET WEIGHT		0.33 KGS
LENGTH		132 MM
AIR PRESSURE		90 PSI

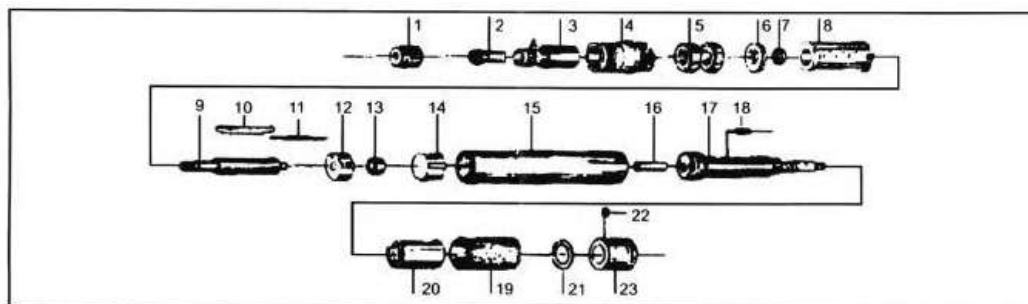

PART LIST

INDEX NO.	DESCRIPTION	INDEX NO.	DESCRIPTION
CE58-01	CLAMPING NUT	CE58-13	BALL BEARING
CE58-02	COLLET	CE58-14	INTAKE PLATE
CE58-03	FRONT COVER	CE58-15	SLEEVE
CE58-04	COLLET FOUNDATION	CE58-16	INTAKE STEEL TUBE
CE58-05	BALL BEARING	CE58-17	HOSE PLUG
CE58-06	SPACER	CE58-18	PIN
CE58-07	LATERAL DISC	CE58-19	SLIDING KNOB
CE58-08	CYLINDER	CE58-20	O RING
CE58-09	ROTOR	CE58-21	O RING
CE58-10	FIBRE VANES	CE58-22	SCREW
CE58-11	PIN	CE58-23	REAR END HOLDER
CE58-12	BEARING PLATE		

OPERATION INSTRUCTION

- Step 1. Set up selected grinding tools on the chuck of the air grinder.
 2. Connected the air line accessory at the end of air hose.
 3. Turn on slowly and gradually clockwise the variable speed switch in silver color when start the motor.
 4. Turn off counter clockwise the variable speed switch in silver color when stop the motor.
 Caution: Please pay attention to operation when turning on the silver variable switch to keep the speed slowly and gradually so that to maintain the motor always in operable condition.